


Solar Landscape Accent Lighting Installation Instructions, Model 79339 Metal, 6-Pack Model 79330 Metal, 6-Pack

Congratulations on your purchase of Hampton Bay solar landscape accent lighting. Let the free power of the sun illuminate your home and grounds.

Highlights:

- Super bright white LED
- Durable weather resistant metal construction
- Up to 8-10 hours on full day charge under direct sunlight
- 2-year limited warranty

IMPORTANT: The Hampton Bay solar light should be installed in an area that gets direct sunlight. Your Hampton Bay solar light can run up to 8-10 hours when it is installed in an area which is free from cover, shade, or shadowing. Note that if it is placed in a shadowed area, the performance may be dramatically reduced.

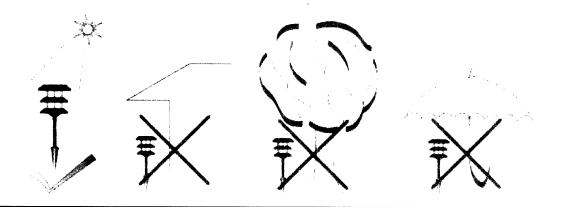

Step 1: Unpack (Figure 1)

Unpack the solar light and you should have the following items:


- 1-1. Head assembly
- 1-2. Post
- 1-3. Stake


Step 2: Assembly (Figure 2)

- Thread the stake into post; make sure it goes all the way down. (Figure 2-1)
- Description Property Property
- Thread the solar head assembly into stake-post assembly; make sure it goes all the way down. (Figure 2-2)

Note: Do not press down on the top of head, which may cause damage to the head assembly. (Figure 2-3)

☼ Remove the battery isolators by pulling out the plastic strip from the bottom of head assembly. (Figure 1-1)

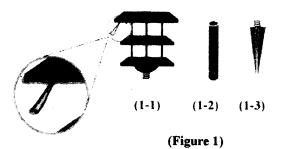

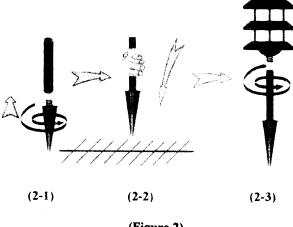

(Figure 2)




Note: If you encounter difficulty when installing the stake due to rocky or clay type soils. use a shovel to loosen the soil before installing the stake. Then attach the post and solar light to the stake. Do not hammer directly on the stake as this may damage the threads.

Replacing the batteries: (Figure 3-1)

Note: The batteries must be replaced with AA size rechargeable Ni-Cd or Ni-MH batteries.

IMPORTANT: For best performance, replace with rechargeable AA Ni-Cd or Ni-MH batteries every year.

To replace the batteries on your solar light, simply open the top head assembly by twisting it counter-clockwise, this will allow access to battery compartment. (Figure 3-1) Replace with two new AA size rechargeable Ni-Cd batteries. For best performance, use the same batch of batteries.

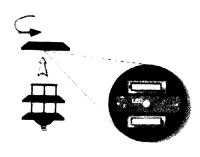

(Figure 3-1)

CAUTION: CONTAINS NICKEL-CADMIUM BATTERIES. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

Care of your solar lights:

The top lens should be cleaned periodically to help maintain optimum performance.

Troubleshooting:

- Q: Light does not work.
- A: 1. Make sure the battery isolator has been moved.
 - 2. Battery connection may be loose. Make sure battery terminal connectors are tight.
- O: Short run time.
- A: 1. Inappropriate location. Solar light is powered by sunlight, it is very important to place the solar light under direct sunlight.
 - 2. Batteries may be dead. Replace with new batteries.

©2000 Hampton Bay Fan & Lighting Co. 2455 Paces Ferry Road, N.W. Atlanta, GA 30339

Date Purchased		
Store Purchased		
Model No.	79339	79330
Vendor No.	11688	
SKU No	386-038	445-291
UPC No	082392 082392	793395 793302

Hampton Bay 2-Year Limited Warranty

The retailer warrants the solar light to be free from defects in workmanship and material present at time of shipment from the factory for a period of two years after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned to the retailer. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part such as by accident or misuse or improper installation or by affixing any accessories, is not covered by this warranty. There is no other express warranty. The retailer hereby disclaims any and all warranties, including but not limited to, those of merchantability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty, which cannot be disclaimed, is limited to the time period as specified in the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damage, so the above exclusion or limitation may apply to you. This warranty gives specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.




Solar Landscape Accent Lighting Installation Instructions, Model 79339 Metal, 6-Pack Model 79330 Metal, 6-Pack

Congratulations on your purchase of Hampton Bay solar landscape accent lighting. Let the free power of the sun illuminate your home and grounds.

Highlights:

- Super bright white LED
- Durable weather resistant metal construction
- Up to 8-10 hours on full day charge under direct sunlight
- 2-year limited warranty

IMPORTANT: The Hampton Bay solar light should be installed in an area that gets direct sunlight. Your Hampton Bay solar light can run up to 8-10 hours when it is installed in an area which is free from cover, shade, or shadowing. Note that if it is placed in a shadowed area, the performance may be dramatically reduced.

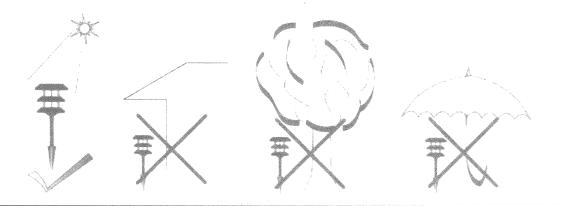

Step 1: Unpack (Figure 1)

Unpack the solar light and you should have the following items:


- 1-1. Head assembly
- 1-2. Post
- 1-3. Stake


Step 2: Assembly (Figure 2)

- Thread the stake into post; make sure it goes all the way down. (Figure 2-1)
- Position the stake-post assembly into ground by pressing the post by hand.
- Thread the solar head assembly into stake-post assembly; make sure it goes all the way down. (Figure 2-2)

Note: Do not press down on the top of head, which may cause damage to the head assembly. (Figure 2-3)

Remove the battery isolators by pulling out the plastic strip from the bottom of head assembly. (Figure 1-1)

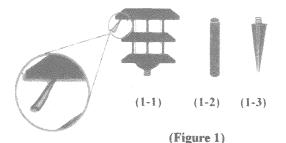

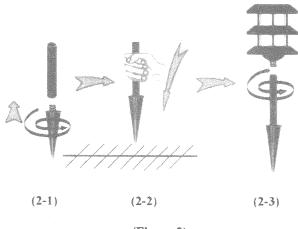

(Figure 2)




Note: If you encounter difficulty when installing the stake due to rocky or clay type soils. use a shovel to loosen the soil before installing the stake. Then attach the post and solar light to the stake. Do not hammer directly on the stake as this may damage the threads.

Replacing the batteries: (Figure 3-1)

Note: The batteries must be replaced with AA size rechargeable Ni-Cd or Ni-MH batteries.

IMPORTANT: For best performance, replace with rechargeable AA Ni-Cd or Ni-MH batteries every year.

To replace the batteries on your solar light, simply open the top head assembly by twisting it counter-clockwise, this will allow access to battery compartment. (Figure 3-1) Replace with two new AA size rechargeable Ni-Cd batteries. For best performance, use the same batch of batteries.

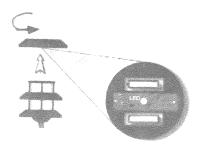

(Figure 3-1)

CAUTION: CONTAINS NICKEL-CADMIUM BATTERIES. BATTERY MUST BE RECYCLED OR DISPOSED OF PROPERLY.

Care of your solar lights:

The top lens should be cleaned periodically to help maintain optimum performance.

Troubleshooting:

- Q: Light does not work.
- A: 1. Make sure the battery isolator has been moved.
 - 2. Battery connection may be loose. Make sure battery terminal connectors are tight.
- Q: Short run time.
- A: 1. Inappropriate location. Solar light is powered by sunlight, it is very important to place the solar light under direct sunlight.
 - 2. Batteries may be dead. Replace with new batteries.

©2000 Hampton Bay Fan & Lighting Co. 2455 Paces Ferry Road, N.W. Atlanta, GA 30339

 Date Purchased

 Store Purchased

 Model No.
 79339
 79330

 Vendor No.
 11688

 SKU No.
 386-038
 445-291

 082392
 793395

 UPC No.
 082392
 793302

Hampton Bay 2-Year Limited Warranty

The retailer warrants the solar light to be free from defects in workmanship and material present at time of shipment from the factory for a period of two years after the date of purchase by the original purchaser. We agree to correct such defects without charge or at our option replace with a comparable or superior model if the product is returned to the retailer. To obtain warranty service, you must present a copy of the receipt as proof of purchase. All costs of removing and reinstalling the product are your responsibility. Damage to any part such as by accident or misuse or improper installation or by affixing any accessories, is not covered by this warranty. There is no other express warranty. The retailer hereby disclaims any and all warranties, including but not limited to, those of merchantability and fitness for a particular purpose to the extent permitted by law. The duration of any implied warranty, which cannot be disclaimed, is limited to the time period as specified in the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. The retailer shall not be liable for incidental, consequential, or special damages arising out of or in connection with product use or performance except as may otherwise be accorded by law. Some states do not allow the exclusion of incidental or consequential damage, so the above exclusion or limitation may apply to you. This warranty gives specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties.